
GATE SHELL INSULATOR INSTALLATION DATA


Please read carefully before installing gate shell insulator GS19998

ME-0739-PS-421-A 8-96

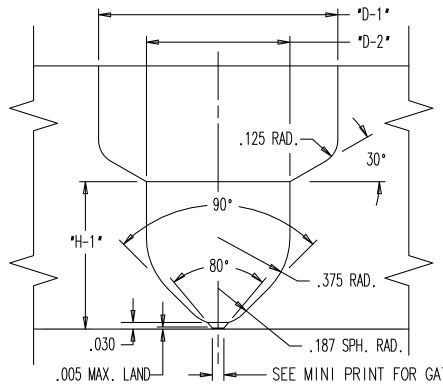

GATE MACHINING DIMENSIONS



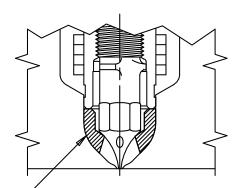

- Gate Shell Insulator shown in correct postion with standard tip and Gate-Mate 4 Nozzle.

SEE MINI PRINT FOR GATE DIAMETERS

CATALOG NUMBER	D-1	D-2	H-1	USED WITH TIP STYLE	USED WITH BODY STYLE
GS10001	1.250	.7500	.770	STANDARD-SUPER SHARP-NO HOLE	GATE-MATE 4
GS10002	1.250	.7500	.770	THRU HOLE	NOZZLE
GS10003	2.000	1.2500	1.000	STANDARD	JUMBO GATE-MATE
GS10004	2.000	1.2500	1.000	THRU HOLE	BUSHING AND NOZZLE
GS10005	1.625	.7500	.875	STANDARD-SUPER SHARP-NO HOLE	MEDIUM GATE-MATE
GS10006	1.625	.7500	.875	THRU HOLE	BUSHING

- 1. Gate machining must be done accordingly to D-M-E specifications found on detail above.
- 2. Nozzle tip must not be altered in any way for Gate Shell Insulator to preform properly.
- 3. Make sure Gate Shell Insulator is fully seated in the gate well.
- 4. For best results, outer surface of tip should be free from all plastic resin.
- 5. If dissimilar resins are to be processed in the same tool, it is recommended that the processing temperature of thhe resins be within the same temperature range of each other
- 6. Wait a minimum of 5 minutes after set point has been reached for sufficient thermal growth to occur creating proper seal.
- 7. The Gate Shell Insulator will not melt and can continuously with stand temperatures to 550°F (288°C).
- 8. If. the tip must be removed from the nozzle body, it is recommended that both the tip and the Gate Shell Insulator be free from all plastic resin befroe reassembling.